

REPAIR PARTS LIST

G & H Model 360-A Lawnmower Stand

1-800-613-4860


PART NO. DESCRIPTION

L-100-S Belt Shield
 L-101 Belt
 L-102 AZ22 Sheave
 L-103 AZ60 Sheave
 L-104 1/3 HP Motor (cap.)
 L-105-S Box Frame
 L-106 2 Wire Extension Cord
 L-107 4 Wire Motor Cord
 L-108 Collar
 L-109 Switch

L-111 Switch Lever
 L-112 Bronze Flange Bearing
 L-113 Ball Bearing

L-116-S Lift Bracket
 L-117 Lift Nut
 L-118 Lift Screw
 L-119-S Channel
 L-120 Control Rod Spring
 L-121 Control Rod
 L-122-S Roller Lift
 L-124-S Base
 L-125-S Pedestal
 L-126-S Work Deck
 L-131 Spacer
 L-132 Collar
 L-123 Tool Tray

L-137 Shaft Collar
 L-151 Safety nut

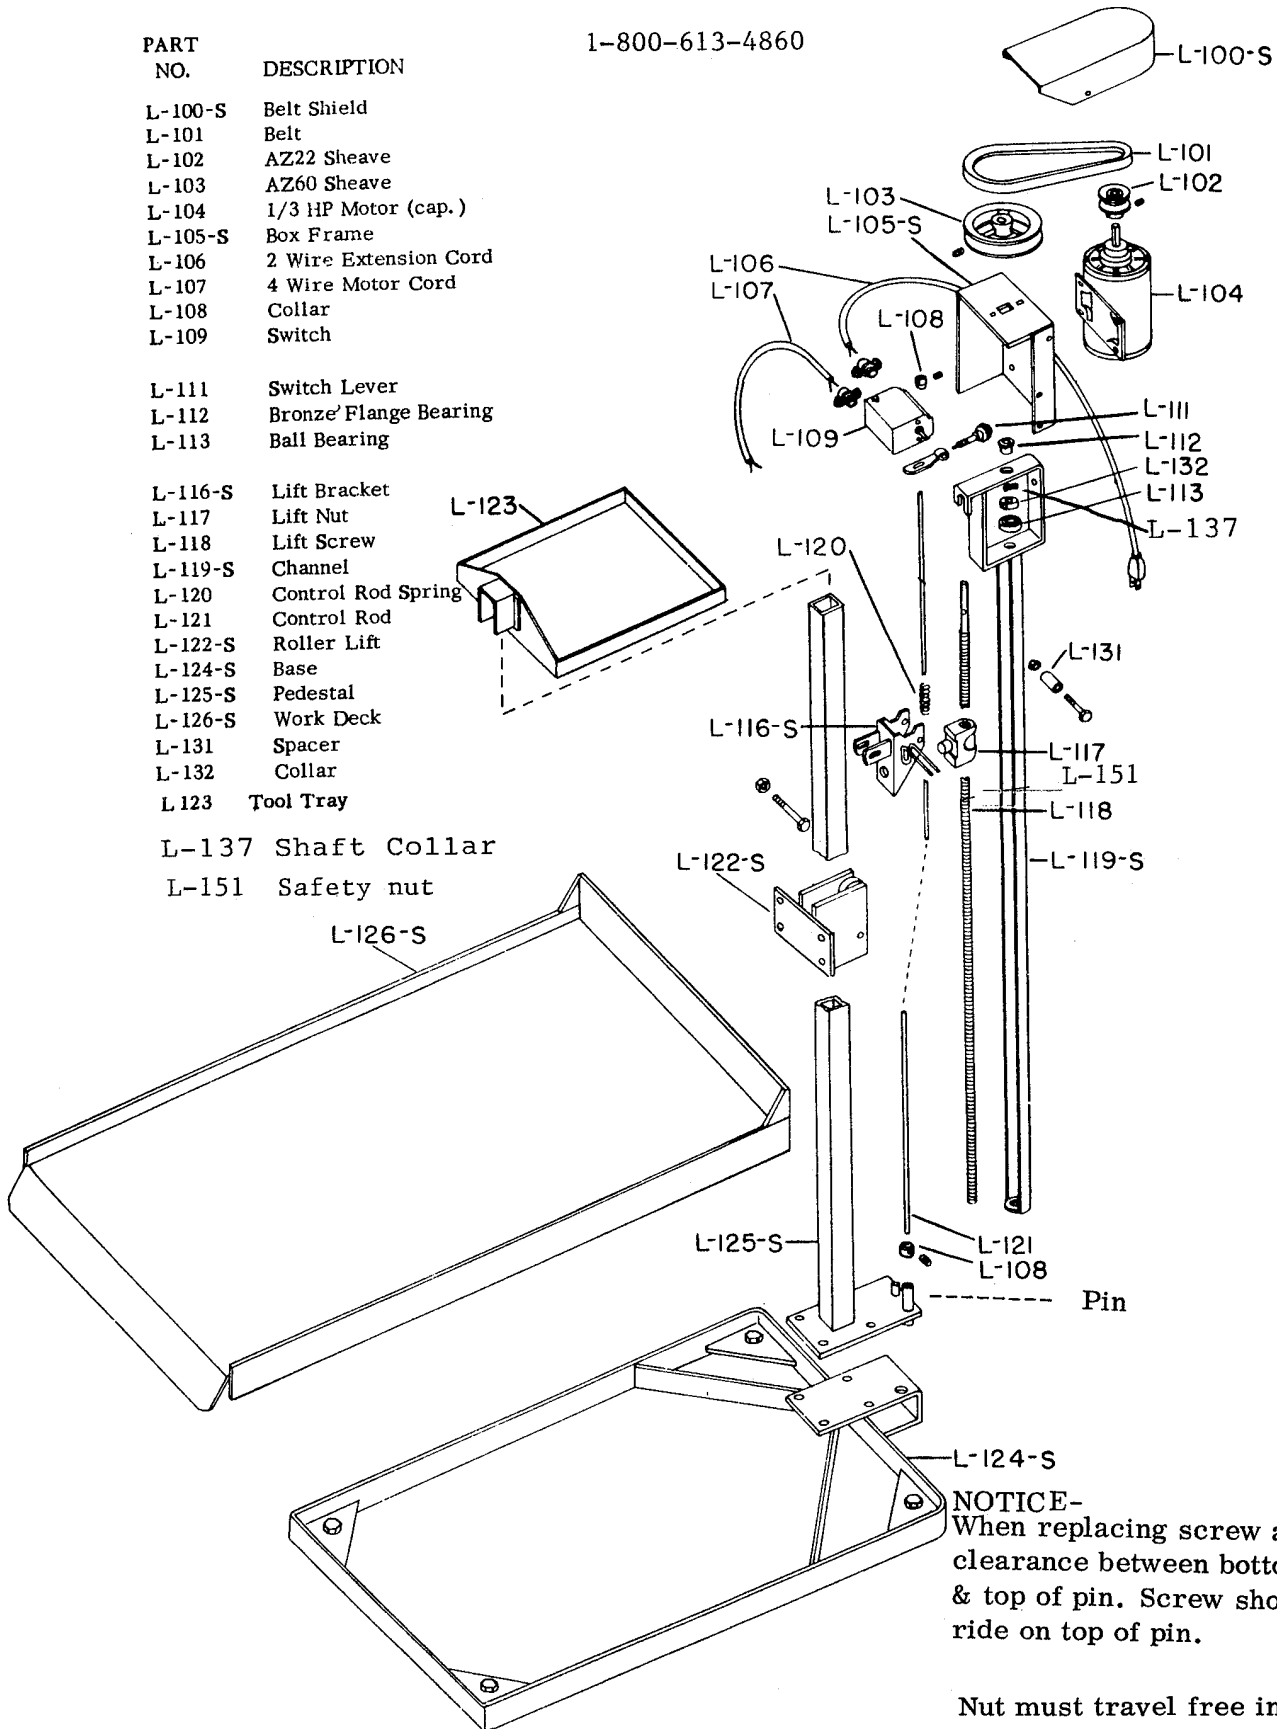

NOTICE-
 When replacing screw allow 1/8" clearance between bottom of screw & top of pin. Screw should never ride on top of pin.

Nut must travel free in channel.